

LOW PROFILE BATH TRAP GUIDE

1. Unscrew this nut off the trap (you will not need this if you use the below adapter):



2. Using one of the adapter fittings below or something similar (purchased from your local plumbing supply store):



*Jenco Joiner 40mm PVC
(Pipe size range: 38mm – 46mm)*




*Dux 40mm Compression Coupling
Female BSP*



*DWV PVC Adaptor Female Iron
40mm (Included)*

2. Screw onto the low-profile bath trap to look like the images below:

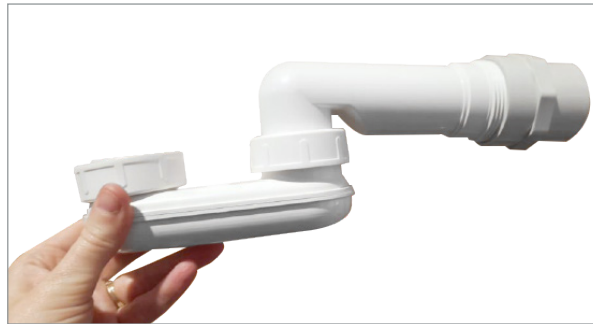

3. Then plumb as you would with your pipe glued or secured into the adapter fitting (on the right) and the bath pop-up waste on the left end (where fingers are in the image above).

