


INSTALLATION INSTRUCTIONS

Slimline Ceiling Diffuser

Code: 8166

expella™
VENTILATION
SERIES

exclusive to Newtech

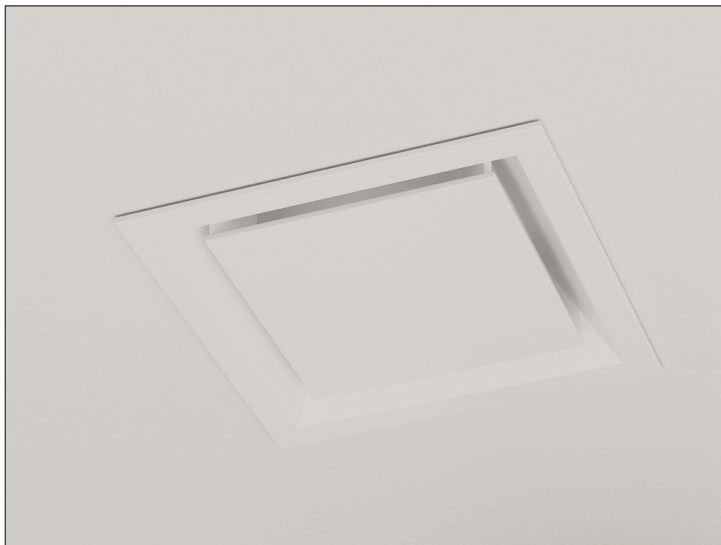

A unique low profile ceiling diffuser designed to improve function and aesthetics in the bathroom and laundry. It incorporates quick fit clips and an integrated non-return volume control damper to simplify installation.

INSTALLATION

The Newtech Slimline Ceiling Diffuser should be installed by qualified tradespeople.

Tools/Fasteners Required

- Tape measure
- Set Square
- Wallboard Saw
- Cordless Drill (3.2mm drill bit)
- Impact Driver (Phillip's bit)
- General Plastering equipment
- Equipment included when purchased as an exhaust kit
 - Large cable tie
 - Duct Tape
 - 150mm Flexible Duct

Choose Ceiling Location

- Close to source of moisture (e.g. shower or clothes drier)
- Suitable clearance for diffuser – away from ceiling framework and other services


Install Fan

Install ducted inline fan (as instructed in fan manual). Route ducting to the diffuser location. The diffuser requires 150mm flexible ducting for connection to the diffuser spigot.

Cut Ceiling Sheet

Mark and cut the ceiling hole. Measure the diffuser frame for accurate hole size.

Hole cut out template dimensions: 225mm x 225mm

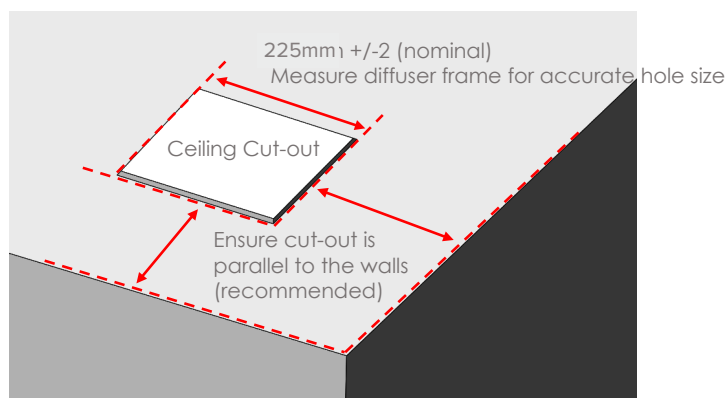

CONTACT US



30 Mill Road, Whanganui
0800 728 662

sales@newtech.co.nz
www.newtech.co.nz