



FRANK
BY NEWTECH

INSTALLATION, PRODUCT CARE & WARRANTY
DROP-IN BATH



Thank you for purchasing Frank Drop-in Bath.

Your Frank Drop-in Bath is made from easy-to-clean sanitary grade acrylic and will have a long lasting and productive life, provided it is used in accordance with manufacturers general conditions.

Your Frank Drop-in Bath must be installed by a registered plumber.

PRODUCT CARE

- Once your bath has been installed, fill the bathtub with cold water to allow the bath to gradually adapt to the temperature.
- After using the bathtub, clean it with a soft cloth and warm, soapy water. This will remove any oil or soap and prevent tide marks from forming.
- Note: Epsom salts are safe to use in acrylic baths and will not cause any product defects. Ensure bath is rinsed thoroughly with water after use.

WARRANTY

For all warranty information please refer to www.newtech.co.nz/warranty.

CONTACT US

Phone 0800 728 662 Email sales@newtech.co.nz

INSTALLATION INSTRUCTIONS


The following tools and materials maybe required:

- Spirit level & Tape Measure
- Hammer and/or Drill.
- Pencil
- Saw
- Nails and/or Screws
- Timber 75mm x 50mm & 50mm x 50mm.
- Construction type Glue e.g. 'Sika Nailbond'
- 18mm timber panel.

INSTALLATION

All Frank Drop-In baths must be fully supported around their top perimeter, all sides and at regular intervals under the bath floor.

A timber frame needs to be constructed to support the leading edge of the bath. Support from the wall and frame should be fixed in place at a height that ensures the bottom of the bath is fully supported by the floor.

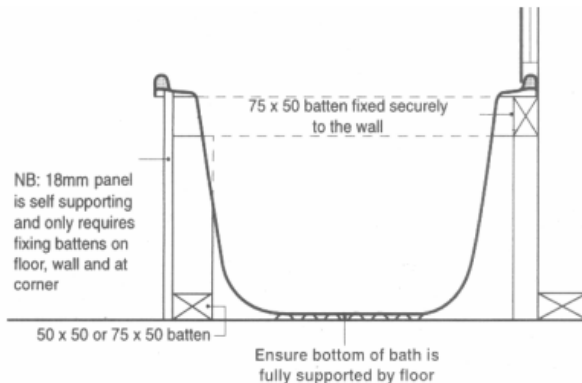

Note: Some installations may require the support battens of the frame to be trimmed in order to accommodate the contours of the bath.

INSTALLATION INSTRUCTIONS

To support the bottom of the bath, pack the underside with an uncompressible material such as a mortar/concrete slurry (see fig 1) or slats of timber cut to the correct height and set at intervals no greater than 200mm (see fig 2). If using slats, glue the slats to the bath and floor with a construction adhesive.

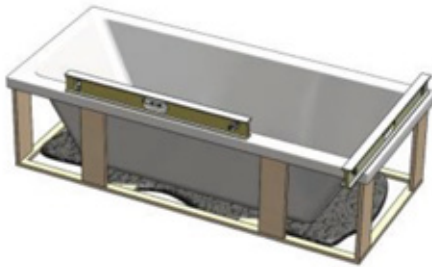


Fig 1

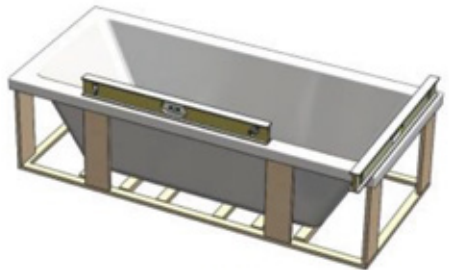


Fig 2

WARRANTY WILL BE VOID IF THE BATH IS NOT ADEQUATELY SUPPORTED

All Newtech Baths must be installed by a Licensed Plumber

These installation instructions are to be used in conjunction with the NZ Building Code, in particular Clause E3 (Internal Moisture).